

4-1/2 Inch Push Plate Wall Controls



Installation and Battery Service

- 1) Remove flat head screw at bottom of box using $\frac{5}{32}$ " hex key. Tilt bottom of box up to separate back plate from box.
- 2) For installation, attach back plate to mounting surface using included fasteners.
- 3) To reinstall, lower top edge of box onto back plate as shown below.
- 4) Swing down and lock in place with screw.



Model

4495SQ
4495SQWR
4497SQ
4497SQWR

Description

Wireless Wall Control
Wireless Wall Control - Weather Resistant
Wired Wall Control
Wired Wall Control - Weather Resistant

SIZE	DRAWING NUMBER	ISSUE
A	21016-PA	1

**POWER
ACCESS**

AMERICA'S DURABLE DOOR OPENER™